


Download

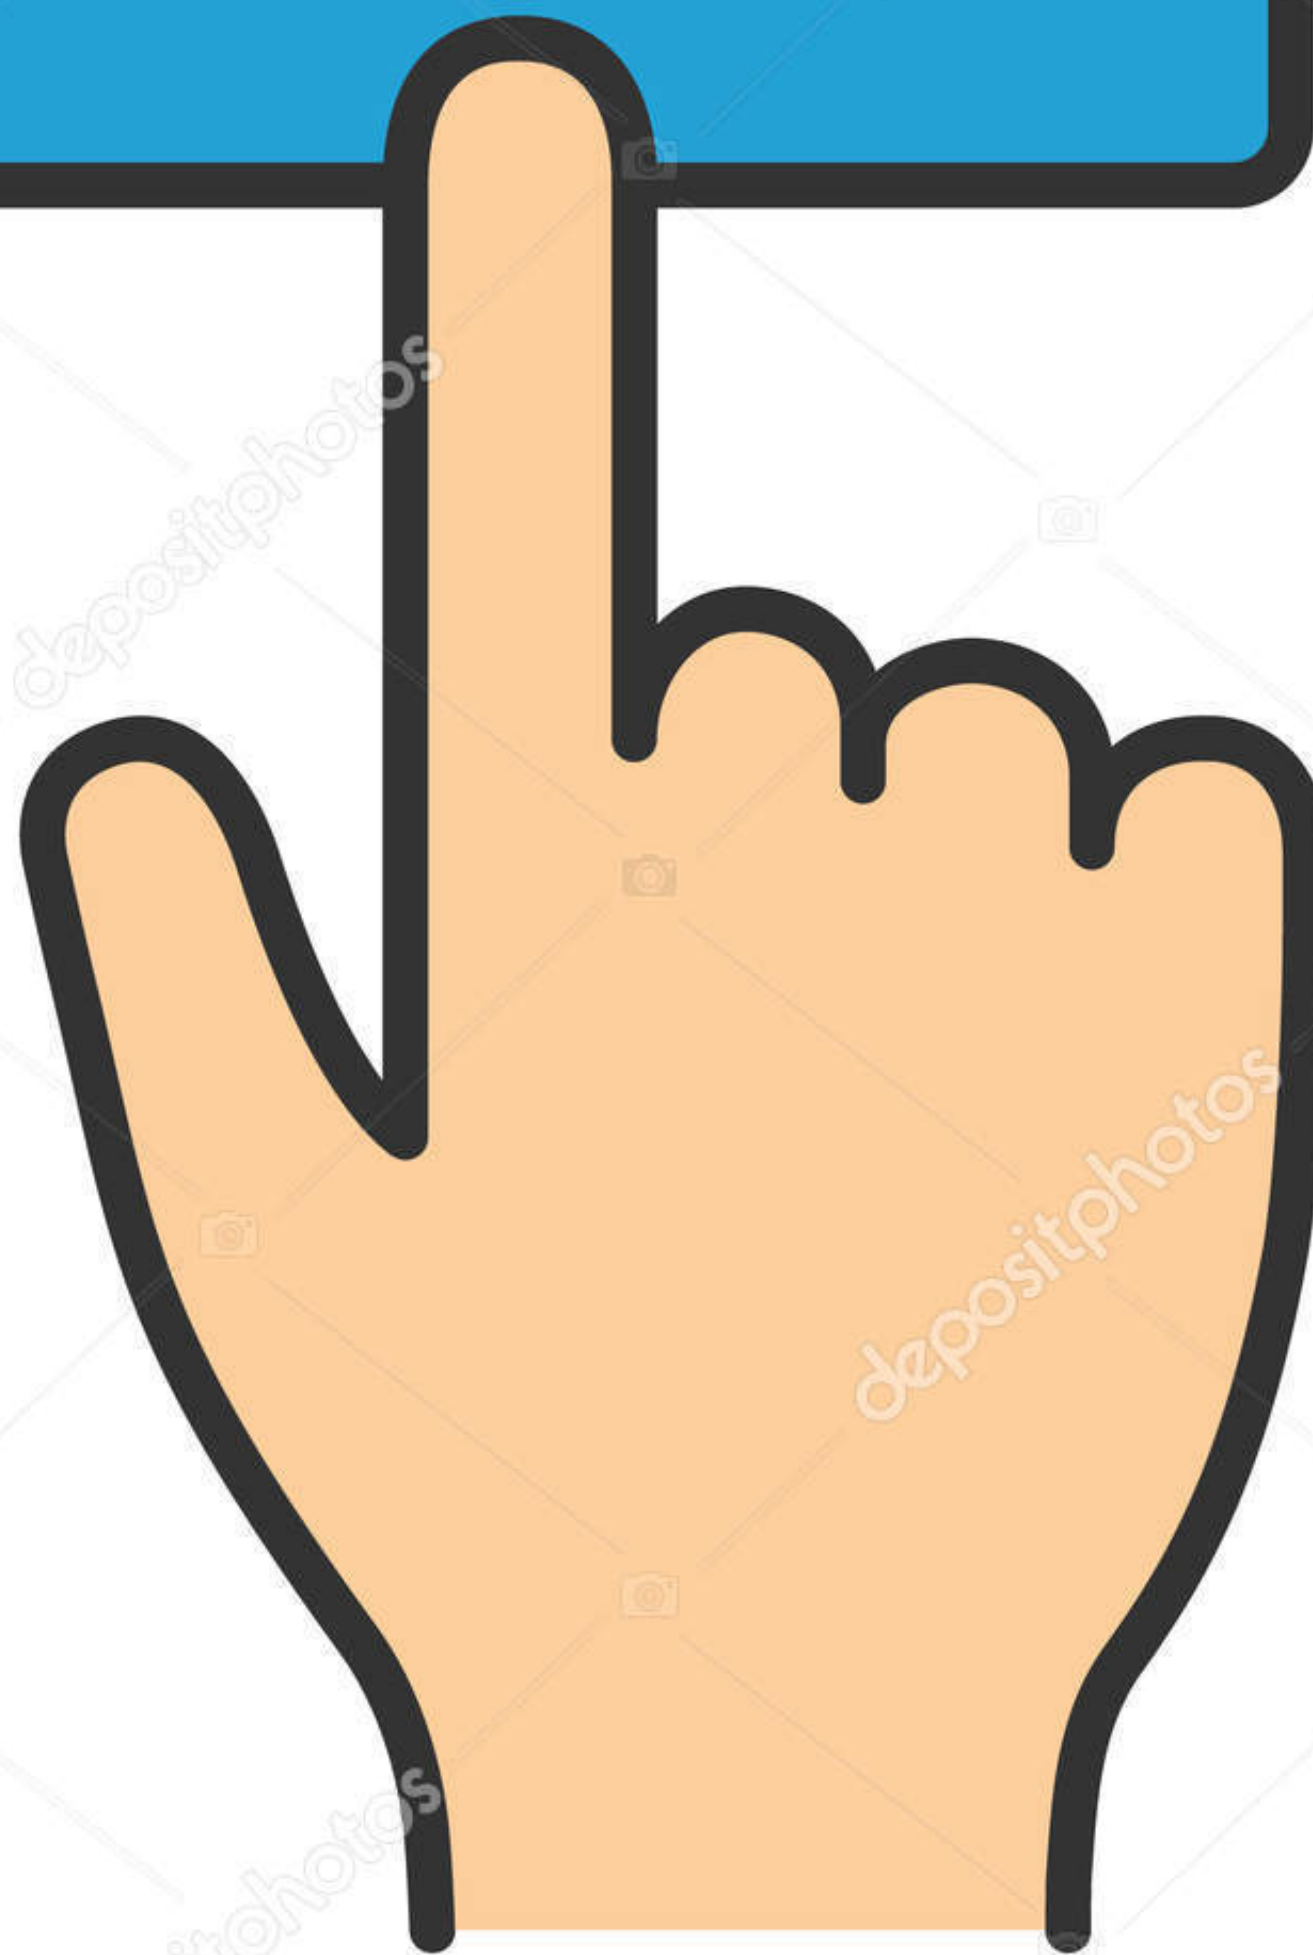

[Honda xmparts catalogue pdf](#)

PWK 33>39 exploded view and partlist

DESCRIPTION	CARB. SIZE		
	PWK33	PWK35	PWK38 & 39
2 STARTER VALVE COMP	1166-818-2101	←-----	←-----
3 FLOAT	W1110-079-9921	←-----	←-----
4 FLOAT BOWL COMP	W1150-311-9910	←-----	←-----
5 GASKET FLOAT BOWL	16163-ND4-7510-M1	←-----	←-----
6 PLUG SCREW	16162-ND4-7511-M1	←-----	←-----
7 O-RING PLUG SCREW	16173-001-0040	←-----	←-----
8 FLOAT VALVE COMP	1062-814-2101	←-----	←-----
9 ANCHOR PLATE	16179-428-6710-M1	←-----	16179-428-6710-M1
Old No.	(16179-428-6711-m1)	←-----	←-----
10 SLOW JET	N424-2100X	←-----	←-----
11 JET NEEDLE	N427-4800X	←-----	←-----
12 CLIP JET NEEDLE	16115-169-0040	←-----	←-----
13 THROTTLE VALVE	N502-1500X	←-----	N502-17000
14 CABLE HOLDER	1101-804-2001	←-----	←-----
15 TCP	1030-840-2001	←-----	←-----
16 GASKET	16110-ND5-7610-M1	←-----	←-----
17 AIR ADJUST SCREW	W1446-231-9900	←-----	←-----
18 SPRING	W1711-416-9900	←-----	←-----
19 SPRING THROTTLE	1290-917-2001	←-----	1290-820-2001
20 CLIP FLOAT VALVE	0405-019-1000	←-----	←-----
21 SCREW FLOAT BOWL	N114-04163	←-----	←-----
Old No.	(N114-04163)	←-----	←-----
22 BOWL VENT PIPE	95003-07042-31	←-----	95003-07048-31
22A BOWL VENT PIPE	N/A	N/A	N/A
23 OVERFLOW PIPE	95003-05033-31	←-----	←-----
24 FLOAT PIN	W9625-25250	←-----	←-----
25 CLIP	W5636-35000	←-----	←-----
26 MAIN JET	99101-357-XXXX	←-----	←-----
27 CABLE ADJUSTER	1036-804-2000	←-----	←-----
27A CABLE ADJUSTER	W9681-59250 (25mm)	←-----	←-----
27B CABLE ADJUSTER	W9681-59200 (20mm)	←-----	←-----
28 NUT CABLE ADJUSTER	0208-007-1100	←-----	←-----
28A NUT CABLE ADJUSTER	W1793-130-9900	←-----	←-----
29 IDLE ADJUSTER (PLASTIC)	1034-853-2000	←-----	←-----
29A IDLE ADJUSTER (BRASS)	N/A	1034-826-2002	1034-826-2002
30 SPRING	1290-963-2000	←-----	←-----
30A NUT	N/A	94002-0508-0S	←-----
31 COLLAR	1118-A35-7000	←-----	←-----
32 BOWL VENT PIPE COMP (FOR QUAD VENT)	N/A	N/A	N/A

[Honda xmparts catalogue pdf](#)

Download



